



4

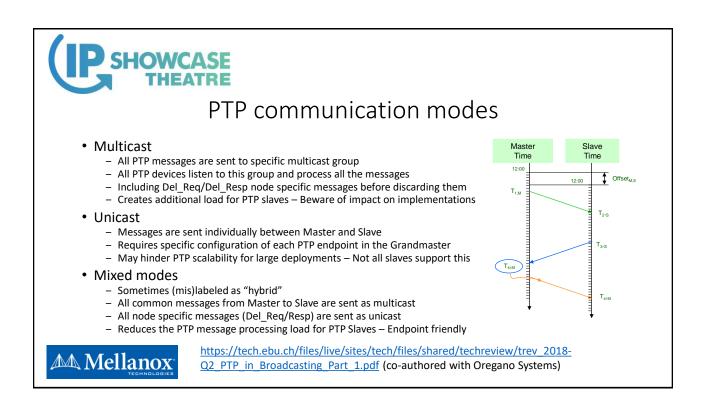

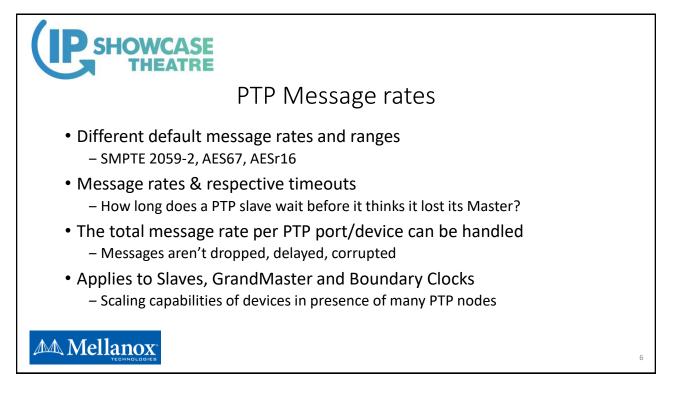

	PTP Port state 🛛 🔍
Port State	Definition
Initializing	Port initializes its data sets, hardware, and communication facilities
Faulty	Fault state of the protocol, no PTP messages except management
Disabled	No messages on its communication path
Listening	Waiting for the announceReceiptTimeout to expire or to receive an Announce message from a master
Pre_Master	Behaves as a master except no messages sent, only management
Master	Port is behaving as master
Passive	No messages sent except signaling or management messages
Uncalibrated	Transient state to allow initialization of synchronization servos, updating of data sets when a new master port has been selected
Slave	Synchronized to the selected master port
	Synchronized to the selected master port ations add additional port state

